


THIS DRAWING IS EFFECTIVE
 FROM: S/N 14926, SEPT. 1989
 TO: CURRENT
 REF: X93-DE

MODELS					PART NO.	DESCRIPTION
93-110		93-120				
HT _M	QTY 931-NF	QTY 931-NR	QTY 932-NF	QTY 932-NR		
1	-	-	1	1	93-004-0894	CASE - 93-120
1	1	1	-	-	93-004-0884	CASE - 93-110
2	1	-	1	-	93-004-1113	COVER - NF
2	-	1	-	1	93-004-1123	COVER - NR
3	1	1	1	1	93-003-1061	END CAP
4	1	1	1	1	90-004-1182	PISTON
5	-	-	1	1	93-004-1103	SHAFT- 13T (93-120)
5	1	1	-	-	93-004-1083	SHAFT- 13T (93-110)
6	*	*	*	*	90-004-1031	SPACER
7	1	1	1	1	01-402-0580	O-RING SEAL
8	1	1	1	1	90-004-1111	BASE GASKET
9	1	1	1	1	01-100-0200	BEARING
10	1	1	1	1	01-112-0290	THRUST BEARING
11	4	-	4	-	01-150-1390	HHCS (1/2-13 X 1)
11	-	4	-	4	01-150-1440	FH SCS (1/2-13 X 1)
12	6	6	6	6	01-150-1030	SHCS (#10-24 X 3/4)
13	1	1	1	1	01-208-0020	HOLLOW HEX PLUG
14	*	*	*	*	01-288-0010	FRICTION DISC
15	*	*	*	*	01-288-0020	SEPARATOR PLATE
16	1	1	1	1	01-400-0120	BACK-UP RING
17	1	1	1	1	01-400-0140	BACK-UP RING
18	1	1	1	1	01-402-0450	O-RING
19	1	1	1	1	01-402-0470	O-RING
20	*	*	*	*	01-261-0290	SPRING
21	1	1	1	1	01-402-0590	O-RING-MOTOR MOUNT

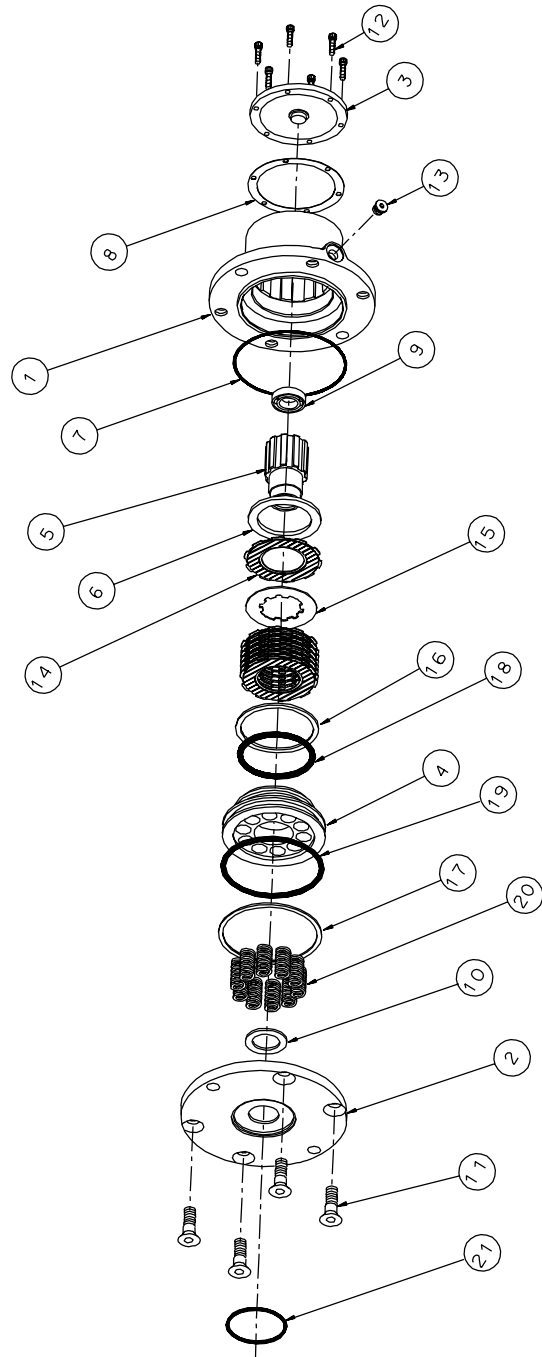

REPAIR KITS FOR SERIES 93 BRAKES

- FRICTION DISC KIT** 93-016-1211
 01-288-0010 FRICTION PLATES (8)
- SEPARATOR PLATE KIT** 93-016-1221
 01-288-0020 SEPARATOR PLATE (11)
- SEAL KIT** 93-016-1181
 01-400-0120 BACK-UP RING, PISTON (1)
 01-400-0140 BACK-UP RING, PISTON (1)
 01-402-0450 O-RING, PISTON (1)
 01-402-0470 O-RING, PISTON (1)
 01-402-0580 O-RING, CASE SEAL (1)
 01-402-0590 O-RING, MOTOR PILOT (1)
 90-004-1101 GASKET, COVER (1)
 90-004-1111 GASKET, BASE (1)
 90-004-1171 GASKET, MOTOR (1)
- MASTER REBUILD KIT** 93-015-1311
 93-016-1211 FRICTION DISC KIT (1)
 93-016-1181 SEAL KIT (1)
 01-100-0120 BEARING (1)

Due to the many combinations of torques and release pressures available for the 93-110, it is impossible to detail each style and supply a repair kit for each individual model. The information listed in this manual is representative of all 93-110 brakes. The repair kits listed below will work with all combinations of torque vs. release pressure, input mountings and friction plates. It is entirely possible to have "extra" parts left over from the repair kits after you have completed the repair or maintenance. If you are not sure about what is required for your brake and its configuration, please contact Eskridge.

* QUANTITIES OF FRICTION DISCS, SEPARATOR PLATES, SPACERS AND SPRINGS MAY VARY DEPENDING ON CUSTOMERS SPECIFIC TORQUE RATING AND RELEASE PRESSURE REQUIREMENTS. 93-120 BRAKES REQUIRING A FULL COMPLEMENT OF FRICTION DISCS (QTY 10) AND SEPARATOR PLATES (QTY 9) WILL NOT INCLUDE ANY SPACERS (ITEM NO. 6). 93-110 BRAKES REQUIRING A FULL COMPLEMENT OF FRICTION DISCS (QTY 7) AND SEPARATOR PLATES (QTY 6) WILL NOT INCLUDE ANY SPACERS (ITEM NO. 6). ONE SPACER TAKES THE PLACE OF ONE FRICTION DISC AND ONE SEPARATOR PLATE.

**QUANTITY OF SPRINGS (10 MAX) DETERMINES BRAKE HOLDING TORQUE AND RELEASE PRESSURE.